IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. **Always unplug appliance from electrical outlet immediately after using (except when charging unit).**

2. Do not place or store appliance where it could fall or be pulled into a tub or sink.

3. Do not use appliance while bathing or in the shower.

4. Do not place appliance in, or drop into, water or other liquids.

5. If appliance has fallen into water, do not reach for it. Unplug immediately.

6. Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER

WARNING – To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Never leave a plugged-in appliance unattended.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.

4. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.

5. Keep the appliance cord away from heated surfaces.

6. Do not pull, twist or wrap the cord around the appliance.

7. Never drop or insert any object into any opening of the appliance.

8. Do not place the appliance on any surface while it is operating.

9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.

10. Do not use the appliance outdoors or where aerosol (spray) products are being used or oxygen is being administered.

11. **THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.**

SAVE THESE INSTRUCTIONS

USER MANUAL

Before using the Class 2 Power Supply, read these instructions carefully.

Model: SW-056008A-S

Rated input voltage: 100-240Vac, 50/60Hz, 0.2A Max

Rated output: 5.6VDC, 80mA

OPERATION

1. For dry location use only. Do not expose to water.

2. When not in use, unplug unit completely.

3. Never operate this unit if the specification is out of the rating.

4. When using this unit, a warm temperature will be reached.

CAUTION

1. Risk of electric shock, dry location use only or do not expose to liquid, vapor, or rain.

2. Do not short the polarity (output cord). Ensure jack is plugged into the Trimmer unit before plugging the adaptor into the outlet.

3. Do not operate any appliance which has a damaged output cord or housing.

4. Always unplug the unit before cleaning or when not in use.

5. This power unit is intended to be correctly oriented in a vertical or floor mount position.

6. Be sure voltage is in correct voltage before plugging in.

TROUBLESHOOTING

If your rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plugging in another appliance to test the outlet.

2. Make sure the electrical plug is not connected to a switch which turns power off when lights are turned off.

3. Make sure the adapter is properly connected to the trimmer, that all connections are secure, and that the trimmer switch is in the "OFF" position.

OPERATING INSTRUCTIONS

1. **Before using the trimmer for the first time, charge continuously for 16 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles.**

2. Always check to see if the charging light is on when you connect the adapter to the trimmer.

3. Plug the adaptor into any wall outlet (at the voltage listed on the label affixed to the adaptor). Unplug adaptor when not in use.

4. The adaptor may become warm while charging. This is normal.

5. Preserving the batteries: in order to maintain the optimum capacity of the rechargeable batteries, the clipper should be recharged for 16 hours approximately every 3 months.

USER MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR TRIMMER

OILING THE BLADES

About once a month you should oil the trimmer blades with the oil provided in your kit. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) After oiling the blades, return the trimmer and oil packet to the trimmer storage pouch. Keep oil away from children.

BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades. Then store the trimmer in its storage pouch to protect the blades until the next use.

Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard and mustache.

DUAL BLADE TECHNOLOGY

The new dual blade technology features a detachable upper blade for regular trimming and a lower blade that provides a close, even cut with the first pass and can also be used as a detailing blade.

GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:

1. The shape and dimensions of your face.

2. The natural growth of your beard/ mustache.

3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly. For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

TYPES OF BEARDS/MUSTACHES

GETTING STARTED:

The dual blade cutting system is designed to neatly, quickly and evenly trim your beard, goatee, mustache, neckline and even that close cut stubble look. While both blades are used for trimming, the upper blade can easily be removed leaving the bottom blade for detailing fine lines and edging.

Comb guides. The table below explains the trim length for each comb. You should start out with a longer trim length comb and work your way down to the desired trim length.

OUTLINING YOUR BEARD

S1	S1 Close stubble look
S2	S2 Medium stubble look
S3	S3 High stubble look
J1	J1 1mm trim
J2	J2 2mm trim
J3	J3 3mm trim
5-POSITION COMB	4mm, 6.5mm, 9mm, 11.5mm & 14mm trims

HOW TO USE THE SINGLE DETAIL TRIMMING BLADE

UPPER BLADE REMOVAL AND ATTACHMENT

The trimmer's upper blade can be removed to use the single detailing blade as shown in Fig. 1 and Fig. 2.

Step 1 Push the upper blade forward.

Step 2 Lift the blade off.

NOTE: All attachments combs also fit on the single detailing blade for single blade trimming.

To re-attach upper blade see Fig. 3 and Fig.4.

Step 3 Line up white tab with opening in lower blade.

Step 4 Insert the white tab, slide forward until the 2 front tabs drop in and the blade snaps in place.

1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

NOW YOU'RE READY TO TRIM YOUR BEARD

1. The trimmer includes a five-position comb for use with the hair trimming blade (4-14mm). Each position increases the length by 2.5mm.

2. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)

4. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 4mm or 6.5mm) and go over your beard again until you achieve the desired length.

BLENDING THE JAWLINE

1. The three jawline attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position (jawline J1 provides 1mm, jawline J2 provides 2mm and jawline J3 provides 3mm).

2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.

TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.

2. Comb through your mustache in the direction it grows.

3. Place the 5-position comb over the facial hair blade and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)

ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache.

5. Use the single detailing blade for fine detail trimming and edging.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

PELIGRO – Cualquier aparato enchufado directamente a un tomacorriente puede ser peligroso.

Para reducir el riesgo de muerte o lesión por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo (a menos que lo esté cargando).**

2. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.

3. No lo use en el baño o la ducha.

4. No coloque el aparato en ni deje caer el aguá o otro líquido.

5. No trate de alcanzar el aparato después de que hubiese caído al agua. Desconéctelo inmediatamente.

6. Desconecte el aparato antes de limpiarlo.

NO TOQUE EL AGUA.

MANTENGALO ALEJADO DEL AGUA

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones:

1. Nunca deje el aparato desatendido mientras esté conectado.

2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con ciertas discapacidades.

3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante. No utilice una extensión con este aparato.

4. No utilice este aparato si el cordón o la clavija están deteriorados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.

5. Mantenga el cable alejado de superficies calientes.

6. No jale, retuerza ni enrolle el cable alrededor del aparato.

7. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas del aparato.

8. No coloque el aparato sobre ninguna superficie mientras esté funcionando.

9. No utilice el aparato con guías o cuchillas rotas o dañadas. Sólo use accesorios recomendados por el fabricante. No utilice una extensión con este aparato.

10. No lo utilice en exteriores, ni lo haga funcionar donde se estén administrando productos en aerosol (spray) o donde se esté administrando oxígeno.

11. **PARA USO DOMÉSTICO SOLAMENTE.**

INSTRUCCIONES DE OPERACIÓN

1. **Cargue el aparato durante 16 horas antes del primer uso. La batería recargable alcanzará su capacidad máxima después de 3 ciclos de cargar/descargar.**

2. Siempre averigüe que la luz de carga está encendida.

3. Enfríe el aparato. Averigüe el voltaje indicado en la etiqueta del adaptador antes de enchufarlo. Desconecte el adaptador después de usarlo.

4. Puede que el adaptador se vuelva caliente. Esto es normal.

5. Para lograr un desempeño óptimo y mantener la capacidad de la batería recargable, cargue el aparato durante 16 horas cada tres meses.

MANTENIMIENTO DE SU CORTADORA

INSTRUCCIONES DE MANTENIMIENTO

Su nueva cortadora cuenta con un juego de cuchillas con dos cuchillas independientes. La cuchilla superior es una cuchilla de corte (la cuchilla inferior es para cortar y la cuchilla hacia adelante. Ambas cuchillas sirven para cortar el vello de manera efectiva. Para usar la cuchilla de afeitado, deberá retirar la cuchilla de corte (la cuchilla inferior), según se describe a continuación.

JUEGO DE CUCHILLAS CON DOS CUCHILLAS INDEPENDIENTES

Para lograr un desempeño óptimo y mantener la cuchilla cortadora en buenas condiciones, limpie la cuchilla después de cada uso. Limpie la cuchilla después de cada uso con el cepillo de limpieza provisto. Guarde el aparato en un lugar especial. Limpie las cuchillas después de cada uso.

Trate cuidado cuando sea necesario cambiar o ajustar las cuchillas. Asegúrese de que estas cuchillas siempre estén cambiadas o afiladas al mismo tiempo.

Las cuchillas de su aparato tienen diseñadas con precisión para un uso específico y deben tratarse con cuidado muy especial. Limpie las cuchillas después de cada uso.

LIMPIEZA DE LAS CUCHILLAS

Las cuchillas de su aparato tienen diseñadas con precisión para un uso específico y deben tratarse con cuidado muy especial. Limpie las cuchillas después de cada uso.

Tenga cuidado cuando sea necesario cambiar o ajustar las cuchillas. Asegúrese de que estas cuchillas siempre estén cambiadas o afiladas al mismo tiempo.

Para lograr resultados óptimos, humedezca ligeramente su barba antes de recortarla (no a mojé). Esto evitará cortar demasiado pelo.

TIPOS DE BARBAS Y BIGOTES

CÓMO CORTAR SU BARBA

Para usar la cuchilla de afeitado, deberá retirar la cuchilla de corte (la cuchilla superior), según se describe a continuación.

Paso 1 Empuje la cuchilla hacia adelante.

Paso 2 Alce la cuchilla.

NOTA: Las guías sirven compatibles con ambas cuchillas

LUBRICACIÓN

Lubrique las cuchillas aproximadamente una vez al mes, usando el aceite provisto. Para no ensuciar, haga esto encima de un periódico. Sostenga el aparato de manera que la cuchilla quede apuntando hacia abajo. Aplique una gota de aceite sobre las cuchillas, luego encienda el aparato y limpie el exceso de aceite con un paño suave.

RESOLUCIÓN DE PROBLEMAS

Si su aparato no agarra carga, siga los pasos siguientes antes de reportarlo a un centro de servicio:

1. Conecte otro aparato a la toma de corriente para asegurarse de que esté funcionando.

2. Asegúrese de que la toma de corriente no esté conectada a un interruptor de control de luz.

3. Asegúrese de que el adaptador esté debidamente conectado al aparato. Que todas las conexiones estén seguras y que el interruptor esté en la posición de apagado "OFF".

INSTRUCCIONES DE USO

Lea las instrucciones cuidadosamente antes de utilizar el aparato y conserve estas instrucciones.

Modelo: SW-056008A-S

Potencia nominal de entrada: 100–240V AC, 50/60HZ, 0.2A Max

Potencia nominal de salida: 5.6V CC, 80mA

FUNCIONAMIENTO

1. Para uso en lugares secos únicamente. No lo exponga al agua.

2. Desenchufe el aparato cuando no lo esté usando.

3. Siempre respete las especificaciones eléctricas.

4. El aparato puede volverse caliente durante el uso. Esto es normal.

PRECAUCIÓN

1. Riesgo de electrocución. Utilícelo en un lugar seco únicamente. No lo rocíe ni exponga a ningún tipo de líquido, a la lluvia o al vapor.

2. No cortocircuite el cordón. Asegúrese de que el cordón se atarado antes de enchufar el adaptador en la toma de corriente.

3. No utilice el adaptador si su cuerpo o el cordón estuviesen dañados.

4. Siempre desconecte el adaptador después de usarlo y antes de limpiarlo.

5. El adaptador siempre debe usarse en posición vertical.

6. Enchufe el cordón en una toma de corriente que no sea del voltaje adecuado.

Model GMT270GB
Instruction Booklet

Conair wants to thank you for choosing our beard/mustache trimmer. We know it will provide you with years of reliable service. For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

IB-11117

12PG127306

© 2012 Conair Corporation

Service Center

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at www.conair.com/registration

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your receipt. Proof of purchase may be required. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

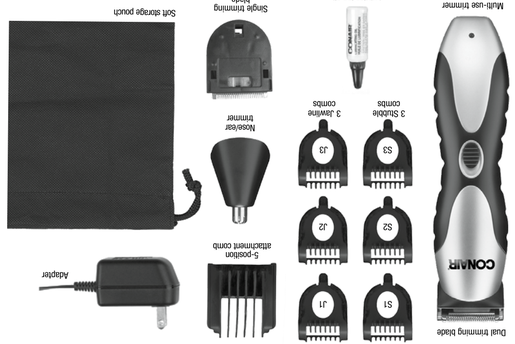

ALL-IN-ONE BEARD, MUSTACHE & STUBBLE TRIMMER GMT270GB

The dual blade cutting system is designed to neatly, quickly and evenly trim your beard, goatee, mustache, neckline and even that close cut stubble look. While both blades are used for trimming, the upper blade can easily be removed leaving the bottom blade for detailing fine lines and edging.

HOW TO GET THE STUBBLE LOOK

This trimmer includes 3 stubble combs. These combs allow you to achieve 3 different looks of stubble or shadow looks for the look you would like to achieve. Comb #1 is closest to your already existing growth. Simply use comb # 1 - #3 like the skin under comb #3 is the hardest. Customize a different look each day! The stubble combs fit on the blade just before the jawline combs, note blending the jawline section of specifics on how combs/jawline combs go on.

ON/OFF SWITCH

To operate, simply slide switch toward blade, to stop push slide away from blade.

CARE OF YOUR TRIMMER

REPLACEMENT (REMOVAL) OF BLADE SET

Before storing you trimmer use a cleaning brush to whisk away any loose hair from the unit and the blades. You should remove the upper blade attar a few uses to clean smaller cutter and pushing forward releasing the cutter assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place.

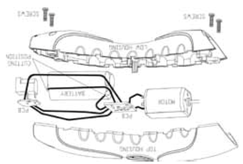

1. Remove the blade set by placing thumb against the between the blades. To remove entire assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place.

2. Remove the bottom housing and push the batteries out. Bring the batteries to the nearest collection center for proper disposal. DO NOT throw the battery into the normal municipal waste system.

3. Installing the nose & ear trimmer
• Insert the pin of the trimmer body into the hexagonal hole of the trimmer as shown in Fig.1

• Press and snap the nose and ear attachment head onto the body of the trimmer as shown in Fig.2

4.Detaching the nose & ear trimmer
• Hold the trimmer in the way as shown in Fig.3 with the thumb pressing the top front part of the nose and ear attachment and snap it off.

ROTARY NOSE & EAR TRIMMER



For easy, safe grooming of long nose and ear hairs, attach the rotary nose/ear trimmer and hold unit it arags that need trimming.

1. Make sure the trimmer on/off switch is in the "off" position
2. Detach normal trimming blade (see "Replacement (Removal) of Blade Set" instructions)

3. Install the rotary nose/ear trimmer as shown in Fig.1

4. Switch on the trimmer and gently insert the rotary nose/ear trimmer into the ear canal or nostril as shown in Fig.2

5. Rotate the trimmer gently around the outer ear or nostril to trim unwanted hairs as shown in Fig.3

6. Switch off the trimmer and remove the rotary nose/ear trimmer from the ear canal or nostril.

7. Clean the rotary nose/ear trimmer after use as described in the "Cleaning" section.

CÓMO CONSEGUIR UN EFECTO "BARBA DE 3 DÍAS"

Su cortadora incluye 3 guías para barba corta, los cuales le permitirán crear 3 estilos de barba corta. Simplemente instale la guía deseada y empiece a cortar su barba. La guía No. 1 es la más corta. La guía No. 3 es la más larga. ¡Puede tener un estilo distinto cada día! Las guías para barba corta caben en la cuchilla de la misma manera que las guías para la quijada. Nota: véase la sección "Igualar la quijada".

CORTAPELO PARA NARIZ Y OREJAS

Para cortar el pelo largo en la nariz y las orejas de manera segura, instale el accesorio cortapelo sobre el cabezal y acerque la punta giratoria a la nariz o las orejas.

1. Asegúrese de que el aparato esté apagado.

Fig.1

2. Retire el juego de cuchillas (véase la sección "Cambio del juego de cuchillas").

Fig.2

3. Para instalar el cortapelo para nariz y orejas:

Fig.3

• Haga coincidir el árbol del motor de la cortadora con el orificio hexagonal en el cortapelo para nariz y orejas (Fig. 1).

• Presione el cortapelo para sujetarlo al cabezal (Fig. 2).

4. Para retirar el cortapelo para nariz y orejas:

• Sostenga el aparato según se indica (Fig. 3) y empuje el accesorio cortapelo hacia arriba.

BOTÓN DE ENCENDIDO/APAGADO

Para encender el aparato, deslice el botón de encendido/apagado hacia las cuchillas. Para apagarlo, deslícelo hacia atrás.

MANTENIMIENTO DE SU CORTADORA

CAMBIO DEL JUEGO DE CUCHILLAS

Limpie las cuchillas después de cada uso con un cepillo de limpieza. Retire la cuchilla superior y limpie el espacio entre las cuchillas cada 2–3 usos. Para retirar el juego de cuchillas, asegúrese de que el aparato esté apagado. Sostenga el aparato con el botón de encendido/apagado frente su cuerpo y empuje la cuchilla pequeña con el pulgar para desencajar el juego de cuchillas. Para instalar el juego de cuchillas, insértelo sobre el cabezal y presione la cuchilla grande para sujetarlo.

REMOCIÓN DE LA(S) BATERÍA(S)

1. Saque los tornillos ubicados en la parte trasera del aparato con un pequeño destornillador cruciforme.

2. Abra el cuerpo del aparato y retire las baterías. Lleve las baterías al centro de reciclaje más cercano. NO tire las baterías con el resto de la basura.

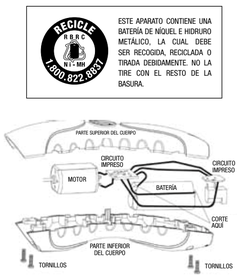

CORTADORA MULTIUSO GMT270GB

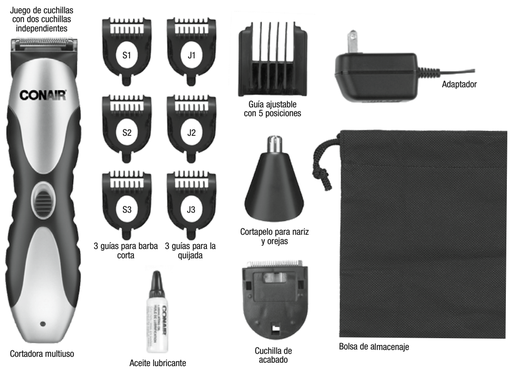

El sistema de cuchillas independientes permite cortar la barba y el bigote cuidadosa, rápida y uniformemente, así como conseguir efectos "barba de 3 días" variados y dar el acabado en todas las zonas que lo requieren incluso la nuca y la barbilla. Ambas cuchillas sirven para cortar la barba y el bigote. La cuchilla inferior es ideal para dar el acabado.

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US$3.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en: www.conair.com/registration

©2012 Conair Corporation

Centro de servicio

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

12PG127306

IB-11117

Modelo GMT270GB
Instrucciones

Gracias por comprar la cortadora para barba/bigote de Conair. Le proporcionará años de servicio confiable.
Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.